



# Fixture Level Impression - Closed Tray Technique

## Step 1

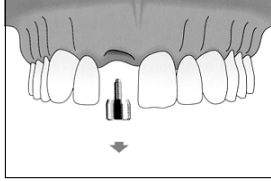


Remove the healing cap.

## Step 2

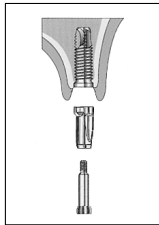

Transfer copings for the fixture level are positioned using a guide pin for connection.

## Step 3

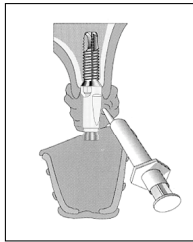

An elastomeric impression material is injected around the impression copings prior to positioning the tray. After set, remove the impression.

## Step 4

Unscrew transfer coping by hand.

*Images courtesy of Branemark.*



**Bay View Dental Laboratory**

1207 Volvo Parkway  
Chesapeake, VA 23320-7654

757.583.1787

[info@BVDL.com](mailto:info@BVDL.com)

[www.BVDL.com](http://www.BVDL.com)